



# KENWORTH BUMPERS



## BEST SELLERS



**W900B/L (taper) years 1982-2010**  
 ABP N31 OFE221002 fog lights  
 ABP N31 OFE021002 no fog lights (shown)



**W900B/L (square) years 1982-2010**  
 ABP N31 OFE221006 fog lights  
 ABP N31 OFE021006 no fog lights (shown)



**T660**  
 ABP N31 OFR501115 round fog lights  
 ABP N31 OFR001115 no fog lights (shown)



**T270, T370**  
 ABP N31 OFS201016 fog lights  
 ABP N31 OFS001016 no fog lights (shown)



**T600**  
 ABP N31 OFH201115 fog lights (shown)  
 ABP N31 OFH001115 no fog lights




**T680**  
 ABP N31 OFV2210708 fog lights, step  
 ABP N31 OFV0010708 no fog lights (shown)



**T800 years 1986-2003**  
 ABP N31 OFG210125 fog lights  
 ABP N31 OFG010125 no fog lights (shown)



**T800 (taper) years 1986-2003**  
 ABP N31 OFG210126 fog lights  
 ABP N31 OFG010126 no fog lights (shown)

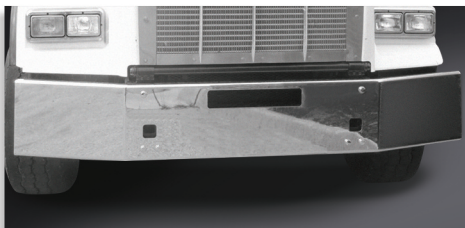

**T800 & T880 years 2004-newer**  
 ABP N31 OFN210125 fog lights  
 ABP N31 OFN010125 no fog lights (shown)



**T800 & T880 (taper) years 2004-newer**  
 ABP N31 OFN210126 fog lights  
 ABP N31 OFN010126 no fog lights (shown)

### Other available models include:

- K100C, K100E
  - W900A
  - T440
  - T450B
- W900B years 2011-newer

- W900S
- Logger
- T800 Widenose
  - T300
  - T400

SEE OUR FULL CATALOG FOR ALL AVAILABLE OPTIONS AND STYLES

